

System Remote Control SR-260

User Guide

Use the SR-260 to control devices throughout your Control4 home automation system.

- Navigate system menus and access media on a TV or other display using the on-screen Navigator (home automation menu).
- Navigate system menus and access media using the remote's List Navigator (text-based home automation menu).

Features

- Two-way communication with your Control4 system.
- Backlit display with a text-based List Navigator.
- 50 buttons total, including quick access buttons, transport control buttons, and a full alphanumeric keypad.
- All buttons are programmable.
- Wakes from sleep mode when picked up or moved (if enabled).
- Ambient light sensor automatically changes the keypad brightness, depending on the light in the room.
- Recharging Station available.

Quick access buttons

Use the remote's *WATCH* and *LISTEN* buttons to quickly select from all playback devices in the room or to select the most recently used device (depending on how the installer configured your system). These buttons can be configured by your Control4 Dealer.

 
See the *Control4 System Quick Start Guide* to learn how to navigate through the system menu and discover all of the cool features and functions of the Navigators.

Programmable buttons


All buttons on the remote are programmable, but the buttons listed below are the most commonly programmed. If these buttons have been programmed by your installer, note their functions here:

- _____
- _____
- _____
- _____
- _____
- _____
- _____
- _____
- _____
- _____
- * _____
- # _____

SR-260 buttons

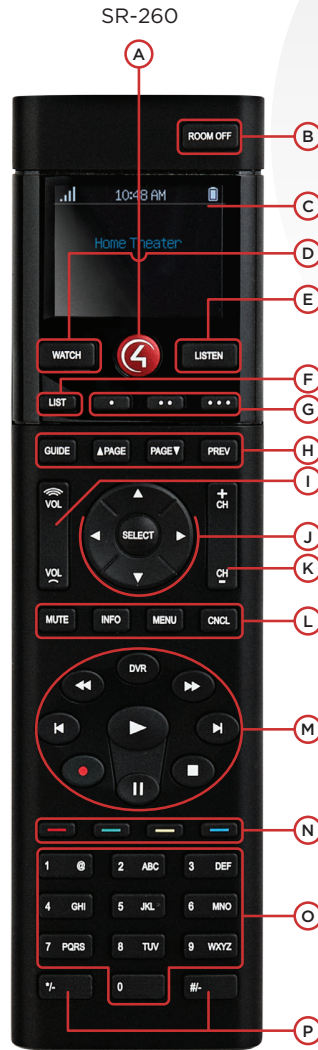

SR-260-I

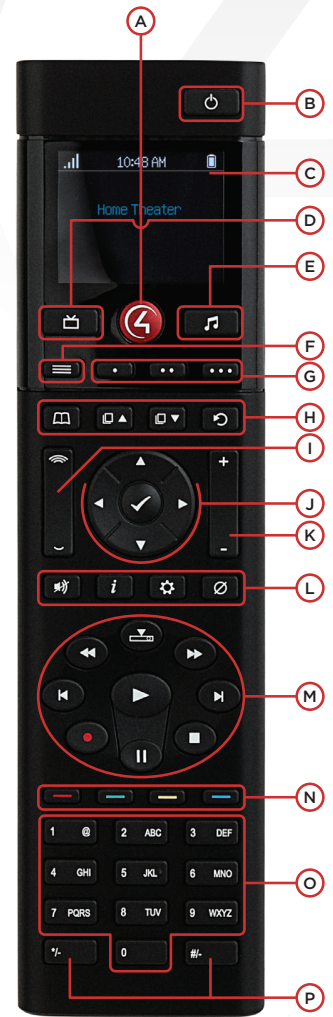 


- A** **Control4 button**—Displays Control4 menu on TV (if enabled)
- B** **ROOM OFF** —Turns room off
- C** **Display**—Screen that displays List Navigator
- D** **WATCH** —Displays video sources or plays most recently watched source
- E** **LISTEN** —Displays audio sources or plays most recently played source
- F** **LIST** —Displays the system menu (List Navigator) on the remote's display screen
- G** **Programmable buttons**—Functions vary (installer programs)
- H** **GUIDE** —Displays TV listings
▲PAGE —Scrolls pages up
PAGE▼ —Scrolls pages down
PREV —Returns to previous channel or screen
- I** **VOL** —Controls device volume
- J** **SELECT** and **directional buttons**—Moves through menus and selects menu items
- K** **CH+/-** —Changes TV channels
- L** **MUTE** —Toggles device sound
INFO —Shows program information
MENU —Accesses device features and settings
CNCL —Sends "Cancel" or "Exit" command
- M** **Playback control buttons**
◀▶ Rewinds or fast forwards
◀▶ Skips back or forward
▶ Plays the current AV source
● Starts recording
■ Stops record or playback
|| Pauses
DVR Controls the DVR
- N** **Programmable buttons**—Functions vary (installer programs)
- O** **Alphanumeric buttons**—Directly enters channel numbers or text descriptions
- P** **Special characters**—Alphanumeric buttons that can also be programmed to work directly with a device

Install and maintain batteries

To install the batteries:


- 1 Install the four AA alkaline batteries (included) into the back of the remote according to the diagram in the battery compartment (with the + terminals pointing toward the bottom of the remote).

 **Important:** The use of rechargeable AA batteries is not supported. Using rechargeable AA batteries may result in inaccurate battery gauge readings.

Battery use and care tips

- Keep battery contacts and compartment clean.
- Remove batteries if the remote is not expected to be used for several months.
- Do not mix new and old batteries.
- After removing old batteries, wait 20 seconds before inserting new batteries.
- Extreme temperatures reduce battery performance. Avoid putting the System Remote Control in very warm places.

Battery replacement safety rules

 **CAUTION!** To prevent battery shorting, leakage, or rupture:

- Use typical AA Alkaline batteries only.
- Do not mix battery types.
- Do not attempt to recharge a battery unless the battery is specifically marked “rechargeable.”
- Never dispose of batteries in a fire.

 **ATTENTION !** Pour empêcher court-circuiter, fuite ou rupture de batterie :

- Utilisez les accumulateurs alcalins typiques d'AA seulement.
- Ne mélangez pas les types de batterie.
- N'essayez pas de recharger une batterie à moins que la batterie soit spécifiquement marqué « rechargeable ».
- Ne vous débarrassez jamais des batteries dans un feu.

Using the on-screen Navigator (optional)

To use the on-screen Navigator with the remote (if enabled):

- 1 Press the red **Control4** button. The TV's Navigator opens.
- 2 To navigate through the on-screen Navigator menus, press the directional buttons, and press the **SELECT** button to make your selection.

Using the remote's List Navigator

To control devices from the remote control:

- 1 On the remote, press **LIST** to access the List Navigator. *Lighting, Comfort, Security*, and other options appear.
- 2 To navigate through the List Navigator and the Control4 system, press the arrow buttons to scroll through the menus, then press the **SELECT** button to make your selection.

Control4

control4.com | 888.400.4070

Copyright ©2017, Control4 Corporation. All rights reserved. Control4, the Control4 logo, the 4-ball logo, 4Store, 4Sight, Control4 My Home, and Mockupancy are registered trademarks or trademarks of Control4 Corporation in the United States and/or other countries. All other names and brands may be claimed as the property of their respective owners. All specifications subject to change without notice.

Using WATCH and LISTEN buttons

The WATCH button can be configured to quickly select the last video source watched or display a list of video sources for the room.

The LISTEN button can be configured to quickly select the last audio source played or display a list of audio sources for the room.

Changing selected rooms

Depending on the room selected on your remote, the remote's buttons may behave differently and the List Navigator may have different options. For example, with **Living Room** selected, the ●●● button may have been programmed to dim the lights, but with **Theater** selected, ●●● may turn them completely off.

To change rooms on the remote:

- 1 Press **List**, then select **Location > Floor > Room**.

Changing preferences

To change the remote's preferences:

- 1 Press **LIST**, then select **Settings**, then **Config**.
 - To change the List Navigator's brightness or the keypad brightness, select **Display Brightness** or **Keypad Brightness**, press the arrow buttons to adjust, then press **SELECT**.
 - To change the remote's sensitivity to motion (to wake it from sleep mode), select **Motion Detect**, then select the sensitivity level.
 - To enable or disable the ambient light sensor, select **Light Sensor**, then select **On** or **Off**.
 - To change the List Navigator's text color, select **Text Color**, press the arrow buttons to pick the color, then press **SELECT**.
 - To check the battery charge, select **Battery Level**.
 - To return the remote's preferences to factory defaults, select **Factory Defaults**.

Regulatory and safety information

To review regulatory information for your Control4 products, see ctrl4.co/reg.

Warranty

Limited two-year warranty. To review warranty details for your Control4 products, see www.control4.com/warranty.

More help

For the latest version of this document and to view additional materials, open the URL below or scan the QR code.



B

200-0405-B
2017-03-16 MS